

# SPECIFICATION FOR APPROVAL

(	) Preliminar	Specification
---	--------------	---------------

# (\*) Final Specification

|--|

BUYER	APPLE
MODEL	

SUPPLIER	LG.Philips LCD CO., Ltd.
*MODEL	LM300W01
SUFFIX	STA4

<sup>\*</sup>When you obtain standard approval, please use the above model name without suffix

SIGNATURE	DATE
	_
/	
/	

your signature and comments.

	DATE
APPROVED BY	DATE
S.G.Hong / G.Manager	
REVIEWED BY	
D.Y.KIM / Manager	
PREPARED BY	
Eric Yoo / Engineer	
Product Engineering	•
LG. Philips LCD Co.,	Ltd

Ver. 1.1 MAR 7, 2007 1/30



# **CONTENTS**

NO.	ITEM	Page
-	COVER	1
-	CONTENTS	2
-	RECORD OF REVISIONS	3
1	GENERAL DESCRIPTION	4
2	ABSOLUTE MAXIMUM RATINGS	5
3	ELECTRICAL SPECIFICATIONS	6
3-1	ELECTRICAL CHARACTERISTICS	6
3-2	INTERFACE CONNECTIONS	8
3-3	SIGNAL TIMING SPECIFICATIONS	12
3-4	SIGNAL TIMING WAVE FORMS	14
3-5	COLOR INPUT DATA REFERANCE	15
3-6	POWER SEQUENCE	16
4	OPTICAL SPECIFICATIONS	18
5	MECHANICAL CHARACTERISTICS	23
6	RELIABILITY	26
7	INTERNATIONAL STANDARDS	27
7-1	SAFETY	27
7-2	EMC	27
8	PACKING	28
8-1	DESIGNATION OF LOT MARK	28
8-2	PACKING FORM	28
9	PRECAUTIONS	29

# **RECORD OF REVISIONS**

Revision No	Data	Page	Description
Ver. 0.0	DEC 07, 2006		First Draft. (Preliminary Specifications)
Ver. 0.1	JAN 15, 2007	8	Update Interface Chip (Sil1169→Sil7189)
Ver. 1.0	MAR 5, 2007		Final Specification
Ver. 1.1	MAR 7.2007	7	Update Inverter Inrush Current



# 1. General Description

The LM300W01 LCD is a Color Active Matrix Liquid Crystal Display with an integral Cold Cathode Fluorescent Lamp(CCFL) back light system. The matrix employs a-Si Thin Film Transistor as the active element. It is a transmissive type display operating in the normally black mode. This TFT-LCD has a 30.0 inch diagonally measured active display area with WQXGA resolution(2560 vertical by 1600 horizontal pixel array). Each pixel is divided into Red, Green and Blue sub-pixels or dots which are arranged in vertical stripes. Gray scale or the luminance of the sub-pixel color is determined with a 8-bit gray scale signal for each dot, thus, presenting a palette of more than 16,777,216 colors.

The LM300W01 has been designed to apply the Dual TMDS<sup>TM</sup>(Transition Minimized differential Signaling) as the interface method to enables a simple and low-cost implementation in both the host and monitor.

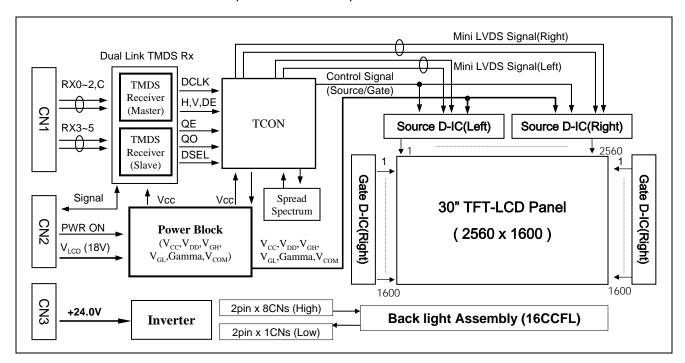


Figure 1. Block diagram

#### **General Features**

Active screen size	30.0 inches (756.228mm) diagonal
Outline Dimension	677.30(H) x 436.80(V) x 42.30(D) mm(Typ.)
Pixel Pitch	0.2505 mm x 0.2505 mm
Pixel Format	2560 horizontal By 1600 vertical Pixels. RGB stripe arrangement
Color Depth	8-bit, 16,777,216 color
Luminance, White	380 cd/m <sup>2</sup> ( 5 point Avg)
Viewing Angle(CR>10)	Viewing Angle Free(R/L 178(Typ.), U/D 178(Typ.))
Power Consumption	Total 116.7 Watt(Typ.), (16.74 Watt @V <sub>LCD</sub> , 100W @380cd/[Lamp=5.5mA])
Weight	5100 g (Typ.)
Display Operating Mode	Transmissive mode, normally Black
Surface Treatments	Hard coating (3H), Anti-glare treatment of the front polarizer

Ver. 1.1 MAR 7, 2007 4 /30



# 2. Absolute Maximum Ratings

The following are maximum values which, if exceeded, may cause faulty operation or damage to the unit.

**Table 1. Absolute Maximum Ratings** 

Parameter	Cumbal	Valu	ıes	Units	Notes	
Falametei	Symbol	Min.	Max.	Offics		
Power Supply Input Voltage for Panel	V <sub>LCD</sub>	-0.3	21.0	$V_{dc}$	At 25°C ± 2°C	
Operating Temperature	T <sub>OP</sub>	0	50	°C	1	
Storage Temperature	T <sub>ST</sub>	-20	60	°C		
Operating Ambient Humidity	H <sub>OP</sub>	10	90	%RH		
Storage Humidity	H <sub>ST</sub>	10	90	%RH		

Note: 1. Temperature and relative humidity range are shown in the figure below.

Wet bulb temperature should be 39 °C Max, and no condensation of water.

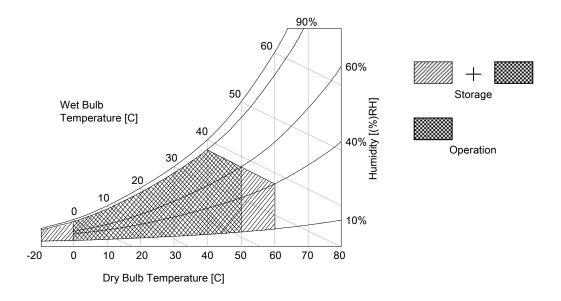


Figure 2. Temperature and relative humidity

Ver. 1.1 MAR 7, 2007 5 /30



# 3. Electrical Specifications

#### 3-1. Electrical Characteristics

It requires two power inputs. One is employed to power the LCD electronics and to drive the TFT array and liquid crystal. The second input power for the CCFL, is typically generated by an inverter. The inverter is an external unit to the LCDs.

#### **Table 2. Electrical Characteristics**

Parameter	Symbol		Values	Unit	Notes			
Farameter	Symbol	Min	Тур	Max	Offic	inoles		
MODULE:	MODULE :							
Power Supply Input Voltage	VLCD	17.0	18.0	19.0	Vdc			
Permissive Power Input Ripple	VdRF			400	mV <sub>p-p</sub>			
Devices Complete Instit Compart	ILCD	-	930	1070	mA	1		
Power Supply Input Current		-	1320	1715	mA	2		
Power Consumption	PLCD	-	16.74	19.26	Watt	1		
Rush current	Irush	-	-	4	А	3		

#### Note:

- 1. The specified current and power consumption are under the  $V_{LCD}$ =18.0V, 25 ± 2°C, $f_V$ =60Hz condition whereas mosaic pattern(8 x 6) is displayed and  $f_V$  is the frame frequency.
- 2. The current is specified at the maximum current pattern.

White: 255Gray

3. The duration of rush current is about 2ms and rising time of power Input is 1ms(min.).

Black: 0Gray

Maximum current pattern



Mosaic Pattern(8 x 6)

White Pattern

[ Figure 3 ] Mosaic pattern : for power consumption measurement



#### **Table 3. INVERTER Electrical Characteristics**

Parameter	Cumbal	Condition		Lloit	Notes		
Parameter	Symbol		Min.	Тур.	Max.	Unit	Notes
Inverter :							
Input Voltage	V <sub>BL</sub>		21.6	24.0	26.4	V	1
Input Current	I <sub>BL</sub>	$V_{BR} = 3.3V$		4.17	4.79	Α	2
Input Power	PBL	$V_{BR} = 3.3V$		100	115	Watt	2
B/L on/off control	Von/off	Lamp ON = High	2.0	-	5.0	V	
		Lamp OFF =Low	0.0	-	0.8	V	
Brightness Adj	VBR		0	-	3.3	V	
Rush Current	Irush	$V_{BR} = 3.3V$			8	Α	4
LAMP:							
Life time			50,000			Hrs	3

#### Notes:

- 1. The input voltage ripple is limited below 400mVp-p.
- 2. The specified current and power consumption are under the typical supply Input voltage, 24V.
- 3. The life is determined as the time at which luminance of the lamp is 50% compared to that of initial value at the typical lamp current on condition of continuous operating at  $25 \pm 2$ °C.
- 4. The duration of rush current is about 2ms.
- 5. Electrical characteristics are determined after the unit has been 'ON' and stable for approximately 30min in a dark environment at 25 °C± 2°C.



#### 3-2. Interface Connections

This LCD employs three kinds of interface connections. A 30-pin connector is used for TMDS signals from the host computer. A 15-pin connector is used for LCD module power and LCM controls signal from external monitor control circuits. And 14-pin connector is used for the inverter for backlight system.

#### 3-2-1. Signal Interface

The Dual TMDS signal interface connector is KDF71G-30S-1H(manufactured by Hirose) or FI-XL30SSL-HF(manufactured by JAE) or equivalent.

The pin configuration for the 30 pin connector is shown in the table below.

Table 4. 30Pin Connector pin configuration(For Dual Link TMDS)

Pin No.	Symbol	Description	Pin No.	Symbol	Description
1	NC	NC	16	RxC-	TMDS negative differential output(Channel C)
2	NC	NC	17	SHLD2	Shield for TMDS Channel 2
3	NC	NC	18	Rx2+	TMDS positive differential output(Channel 2)
4	NC	NC	19	Rx2-	TMDS negative differential output(Channel 2)
5	SHLD5	Shield for TMDS Channel 5	20	SHLD1	Shield for TMDS Channel 1
6	Rx5+	TMDS positive differential output(Channel 5)	21	Rx1+	TMDS positive differential output(Channel 1)
7	Rx5-	TMDS negative differential output(Channel 5)	22	Rx1-	TMDS negative differential output(Channel 1)
8	SHLD4	Shield for TMDS Channel 4	23	SHLD0	Shield for TMDS Channel 0
9	Rx4+	TMDS positive differential output(Channel 4)	24	Rx0+	TMDS positive differential output(Channel 0)
10	Rx4-	TMDS negative differential output(Channel 4)	25	Rx0-	TMDS negative differential output(Channel 0)
11	SHLD3	Shield for TMDS Channel 3	26	NC	NC
12	Rx3+	TMDS positive differential output(Channel 3)	27	NC	NC
13	Rx3-	TMDS negative differential output(Channel 3)	28	NC	Reserved for HDCP
14	SHLDC	Shield for TMDS Channel C	29	NC	Reserved for HDCP
15	RxC+	TMDS positive differential output(Channel C)	30	NC	NC

Notes: 1. Interface Chips

: Sil7189 x 1ea (Dual TMDS Receiver , Silicon Image)

2. Connector

2.1 Connector(Receptacle): KDF71G-30S-1H(Hirose) or

FI-XL30SSL-HF(JAE) or Equivalent.

2.2 Mating Connector(Plug): FI-X30H and FI-X30HL or its equivalent.

3. 28,29 pins are only used in LCM manufacture.





#### 3-2-2.Power Connector


The power connector is 53261 (manufactured by Molex) or equivalent. The pin configuration for the 15 pin connector is shown in the table below.

Table 5. 15Pin Connector pin configuration (Power Connector CN1)

Pin	Symbol	Description	Notes
1	SDA	Equalizer_DATA(for receiver option)	
2	SCL	Equalizer_CLOCK(for receiver for option)	
3	PWR_ON	LCM ON control signal input	
4	GND	Ground	
5	V <sub>LCD</sub>	LCM power supply, +18V ±5%	
6	V <sub>LCD</sub>	LCM power supply, +18V ±5%	
7	$V_{LCD}$	LCM power supply, +18V ±5%	
8	$V_{LCD}$	LCM power supply, +18V ±5%	
9	GND	Ground	
10	HDCP_CLK	HDCP_CLOCK	
11	HDCP_DAT	HDCP_DATA	
12	GND	Ground	
13	HS_OUT	Hsync Output	
14	VS_OUT	Vsync Output	
15	V <sub>I2C</sub>	Power of I2C (+5V)	


Notes: 1. Connector

1) Connector(Receptacle): 53261 (Molex) of Equivalent.
2) Mating Connector(Plug): 51021 or its equivalent.





# [Figure 4] Connector diagram

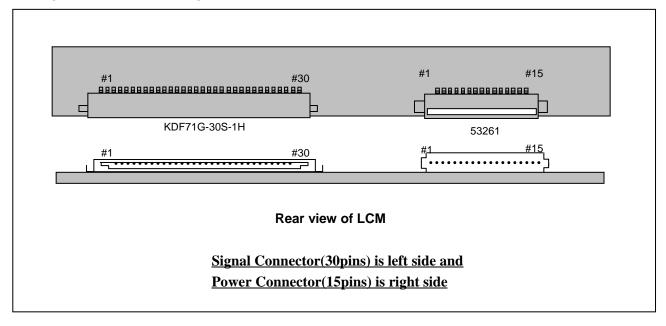

#### Notes:

- 1. All GND(ground) pins should be connected together and should also be connected to the LCD's metal frame.
- 2. All power input pins should be connected together.
- 3. All NC pins should be separated from other signal or power.



# 3-2-3. Inverter Connector for Backlight

The inverter connector is S14B-PH-SM3(manufactured by JST) or equivalent The pin configuration for the 14 pin connector is shown in the table below.


Table 6. 14Pin Connector Pin Configuration (Inverter Connector)

Pin	Symbol	Description	Notes
1	$V_{BL}$	Power Supply, +24V	
2	$V_{BL}$	Power Supply, +24V	
3	$V_{BL}$	Power Supply, +24V	
4	$V_{BL}$	Power Supply, +24V	
5	$V_{BL}$	Power Supply, +24V	
6	GND	Power Ground	
7	GND	Power Ground	
8	GND	Power Ground	
9	GND	Power Ground	
10	GND	Power Ground	
11	VS	No connection	
12	V <sub>ON</sub>	BL On/Off Control signal	ON: 2.0V~5.0V OFF: 0.0~0.8V
13	$V_{BR}$	PWM Dimming Control Signal	Max3.3V/Min0.0V
14	Status	Lamp Operating Status	Normal =0~0.8V Abnormal= <b>3.0~5.0V</b>

#### 1. Connector

1) Connector(Receptacle): S14B-PHA-SM3 (JST) or equivalent

2) Mating Connector(Plug): PHR14 or its equivalent

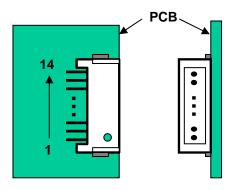

Rear view of LCM

PS ON: High



#### **Product Specification**

#### 3-3. Signal Timing Specifications

This is the signal timing required at the input of the TMDS Transmitter. All of the interface signal timing should be satisfied with the following specifications for it's proper operation.

Table 7. TIMING TABLE 1 ( Dual mode: 2560x1600)

	ITEM	SYMBOL	Min	Тур	Max	Unit	Note
	Period	t <sub>CLK</sub>	7.45	7.45	7.45	ns	
DCLK	Frequency	f <sub>CLK</sub>	134.25	134.25	134.25	MHz	268.5 / 2 (Dual)
	Width-Total	t <sub>HT</sub>	2720	2720	2720	t <sub>CLK</sub>	
Цоло	Period	t <sub>HP</sub>	10.13	10.13	10.13	us	
Hsync	Frequency	f <sub>H</sub>	98.71	98.71	98.71	KHz	
	Width	t <sub>WH</sub>	32	32	32	t <sub>CLK</sub>	
	Width-Total	t <sub>VT</sub>	1646	1646	1646	t <sub>HP</sub>	
Voves	Period	t∨P	16.68	16.68	16.68		
Vsync	Frequency	f <sub>V</sub>	59.97	59.97	59.97	Hz	
	Width	twv	6	6	6	t <sub>HP</sub>	
	Horizontal Valid	t <sub>HV</sub>	2560	2560	2560		
	Horizontal Back Porch	t <sub>HBP</sub>	80	80	80	t <sub>CLK</sub>	
	Horizontal Front Porch	t <sub>HFP</sub>	48	48	48		
Data	Horizontal Blank	-	160	160	160		t <sub>WH</sub> + t <sub>HBP</sub> + t <sub>HFP</sub>
Enable	Vertical Valid	t <sub>V V</sub>	1600	1600	1600		
	Vertical Back Porch	t <sub>VBP</sub>	38	38	38		
	Vertical Front Porch	t <sub>VFP</sub>	2	2	2	t <sub>HP</sub>	
	Vertical Blank	-	46	46	46		t <sub>WV</sub> + tV <sub>BP</sub> + t <sub>VFP</sub>

Note: Hsync period and Hsync width-active should be even number times of tclk. If the value is odd number times of tclk, display control signal can be asynchronous. In order to operate this LCM a Hsync, Vsyn, and DE(data enable) signals should be used.

- 1. : The performance of the electro-optical characteristics may be influenced by variance of the vertical refresh rates.
- 2. Vsync and Hsync should be keep the above specification.
- 3. Hsync Period, Hsync Width, and Horizontal Back Porch should be any times of of character number(8).
- 4. The polarity of Hsync, Vsync is not restricted.



Table 8. TIMING TABLE 2 (Single mode: 1280x800)

PS ON: Low


	ITEM	SYMBOL	Min	Тур	Max	Unit	Note
DCLK	Period	t <sub>CLK</sub>	14.08	14.08	14.08	ns	
DCLK	Frequency	f <sub>CLK</sub>	71.00	71.00	71.00	MHz	Single
	Width-Total	t <sub>HP</sub>	1440	1440	1440	t <sub>CLK</sub>	
Номпо	Period	t <sub>HP</sub>	20.28	20.28	20.28	us	
Hsync	Frequency	f <sub>H</sub>	49.31	49.31	49.31	KHz	
	Width	t <sub>WH</sub>	32	32	32	t <sub>CLK</sub>	
	Width-Total	t <sub>VT</sub>	823	823	823	t <sub>HP</sub>	
Vsync	Period	t <sub>VP</sub>	16.69	16.69	16.69	ms	
VSylic	Frequency		59.91	59.91	59.91	Hz	
	Width	t <sub>WV</sub>	6	6	6	t <sub>HP</sub>	
	Horizontal Valid	t <sub>HV</sub>	1280	1280	1280		
	Horizontal Back Porch	t <sub>HBP</sub>	80	80	80	t <sub>CLK</sub>	
	Horizontal Front Porch	t <sub>HFP</sub>	48	48	48		
Data	Horizontal Blank	-	160	160	160		t <sub>WH</sub> + t <sub>HBP</sub> + t <sub>HFP</sub>
Enable	Vertical Valid	t <sub>V V</sub>	800	800	800		
	Vertical Back Porch	t <sub>VBP</sub>	15	15	15		
	Vertical Front Porch	t <sub>VFP</sub>	2	2	2	t <sub>HP</sub>	
	Vertical Blank	-	23	23	23		t <sub>WV</sub> + tV <sub>BP</sub> + t <sub>VFP</sub>

#### Notes:

Hsync period and Hsync width-active should be even number times of tCLK. If the value is odd number times of tCLK, display control signal can be asynchronous. In order to operate this LCM a Hsync., Vsync and DE(data enable) signals should be used.

- 1. The performance of the electro-optical characteristics are may be influenced by variance of the vertical refresh rates.
- 2. Vsync, Hsync should be keep the above specification.
- 3. Hsync Period should be a double number of character (8).
- 4. The polarity of Hsync, Vsync is not restricted.

# 3-4. Signal Timing Waveforms

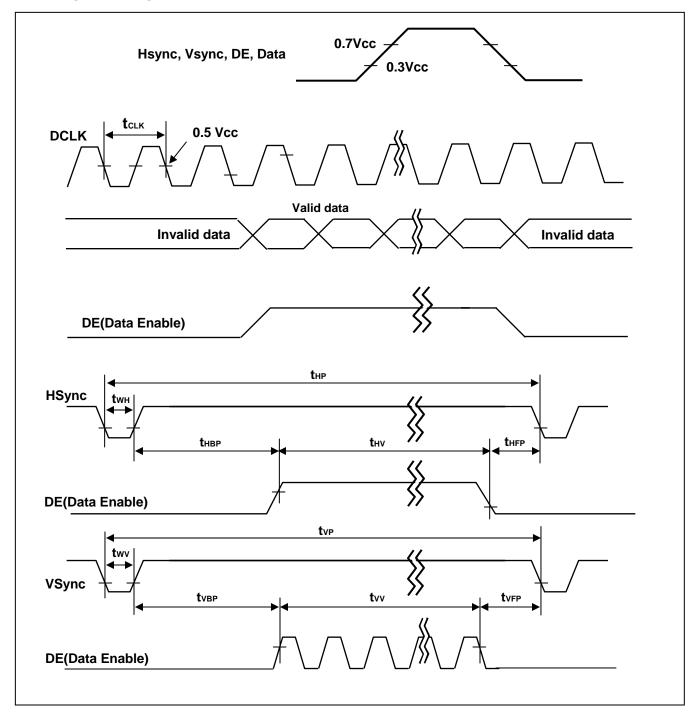



# 3-5. Color Input Data Reference

The brightness of each primary color (red,green and blue) is based on the 8-bit gray scale data input for the color; the higher the binary input, the brighter the color. The table below provides a reference for color versus data input.

Table 9. COLOR DATA REFERENCE

											ln	put	Сс	lor	Da	ta									
	Color	Red					)		405		Gre	een			)		405		BI	ue					
		IV R7	1SE	R5	DΛ	D2	_	LS	B R0		1SE		G4	G3	_	LSI	G0 B		1SE	_	B1	B2	_	LSI B1	_
	Black	0		0		0		0	0	<u>6</u>	0	0		0		0		0		0		0	0	0	
Basic Color	Red (255) Green (255) Blue (255) Cyan Magenta Yellow White	1 0 0 1 1	0 1 0 0 1 1 1	1 0 0 1 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	1 0 0 1 1 1	0 1 0 1 1	0 1 0 1 1	0 1 0 1 1	0 0 1 0 1 1	0 1 0 1 1	0 1 0 1 0 1	0 1 0 1 0 1	0 1 0 1 0 1	0 0 1 1 0 1	0 0 1 1 1 0 1	0 0 1 1 1 0 1	0 0 1 1 1 0 1	0 0 1 1 0 1	0 0 1 1 0 1	0 0 1 1 0 1	0 0 1 1 1 0
Red	Red(000) Dark Red(001) Red(002) Red(253) Red(254) Red(255) Bright	0 0 - - 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 - - 1 1	0 0 1 - 0 1 1	0 1 0 - 1 0 1	000 000	000 000	000 000	000 000	000 000	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 - 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 - 0 0
Green	Green(000) Dark Green(001) Green(002) Green(253) Green(254) Green(255) Bright	000 000	000 000	000 000	000 000	000 000	0 0 0 0 0 0	000 000	000 000	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 0 - 1 1 1	0 0 - - 1 1	0 0 1 - 0 1	0 1 0 - 1 0 1	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 - - 0 0
Blue	Blue(000) Dark Blue(001) Blue(002) Blue(253) Blue(254) Blue(255) Bright	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 - 0 0 0	0 0 0 0 0	0 0 0 - 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	0 0 0 - 0 0 0	0 0 - - 1 1	0 0 - - 1 1	0 0 - - 1 1	0 0 - - 1 1	0 0 - - 1 1	0 0 - - 1 1	0 0 1 - 0 1	0 1 0 - 1 0 1



#### 3-6. Power Sequence for Panel

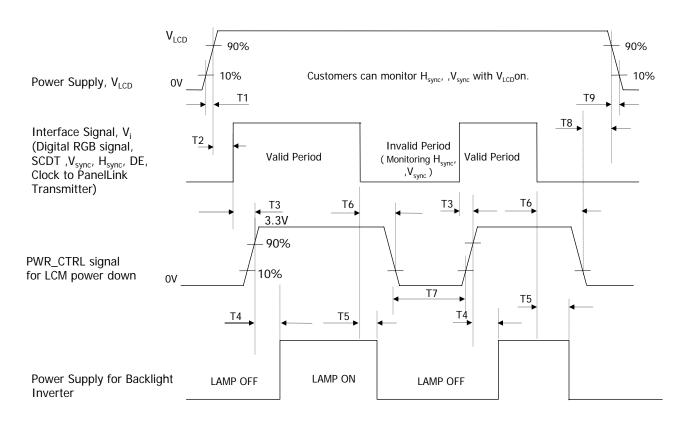


Table 10. Power Sequence

Darameter		Values	Units	Notos	
Parameter	Min.	Тур.	Max.	Units	Notes
T1	-		30	ms	
T2	-	-	-	ms	
Т3	-		300	ms	
T4	100		-	ms	
T5	-		80	ms	
T6	-		80	ms	
T7	400		-	ms	
T8	10		-	ms	
Т9	-		200	ms	

Notes: 1. Please avoid floating state of interface signal at invalid period.

- 2. When the interface signal is invalid, be sure to pull down the power supply for LCD  $V_{LCD}$  to OV.
- 3. Lamp power must be turn on after power supply for LCD and interface signal are valid.



# 3-6. Power Sequence for Inverter

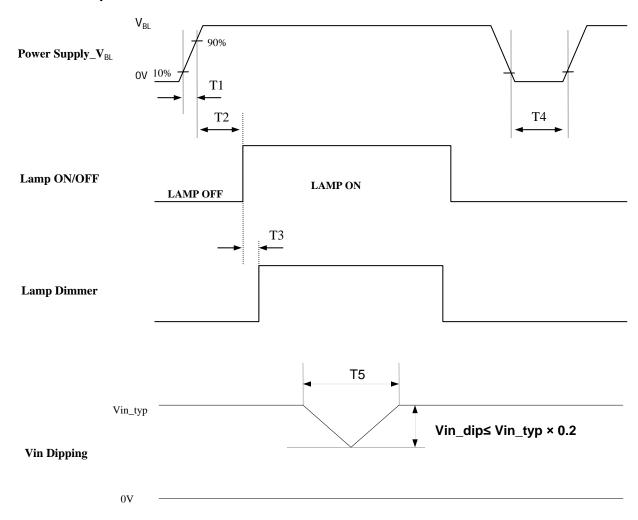


Table 11. Power Sequence

Parameter		Values		Units	Notes	
Parameter	Min.	Тур.	Max.	Units	Notes	
T1	20	-	-	ms		
T2	200	-	-	ms		
Т3	-	-	50	ms		
T4	500	-	-	ms		
T5	-	-	10	ms		


Ver. 1.1 MAR 7, 2007 17 /30



# 4. Optical Specification

Optical characteristics are determined after the unit has been 'ON' and stable for approximately 30 minutes in a dark environment at 25 °C. The values specified are measured at an approximate distance 50cm from the LCD surface at a viewing angle of  $\Phi$  and  $\theta$  equal to 0 °.

Figure. 5 presents additional information concerning the measurement equipment and method.

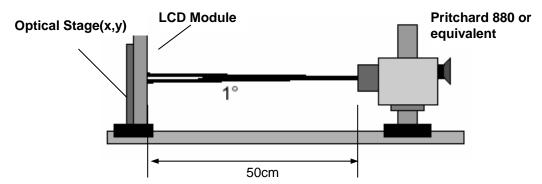

[Figure 5] Optical characteristic measurement equipment and method

Table 12. Optical characteristics (Ta=25±2°C, V

 $(Ta=25\pm2^{\circ}C, V_{LCD}=18V, f_{V}=60Hz, CLK=134.25MHz, I_{OUT}=5.5mA)$ 

Parame	otor.	Cumbal		Values		Units	Notes
Parame	eter	Symbol	Min	Тур	Max	Units	Notes
Contrast Ratio		CR	450	700			1
Surface Luminanc	e, white	L <sub>WH</sub>	320	380		cd/m <sup>2</sup>	2
Luminance Variation	n	$\delta_{\text{WHITE}}$	-	-	30	%	3
	Rise Time	Tr <sub>R</sub>	-	6	12	ms	4
Pagnanga Tima	Decay Time	$Tr_D$	-	6	12	ms	4
Response Time	Gray To Gray	$T_{GTG\_AVR}$	-	8	-	ms	5
	Glay 10 Glay	$T_{GTG\_MAX}$	-	17	-	ms	5
	RED	Rx		0.640			
		Ry	]	0.343			
	GREEN	Gx	]	0.292			
Color Coordinates		Gy	Тур	0.611	Тур		
[CIE1931]	BLUE	Bx	-0.03	0.146	+0.03		
		Ву	]	0.074			
	WHITE	Wx	]	0.313			
		Wy	]	0.329			
Color shift	Horizontal	$\theta_{CST\_H}$	-	176	-	degree	6
Color Shift	Vertical	$\theta_{ extsf{CST_V}}$	-	176	-		
Viewing Angle (CR>	10)						
gonoral	Horizontal	$\theta_{H}$	170	178	-	dograa	7
general	Vertical	$\theta_{V}$	170	178	-	degree	
Effoctivo	Horizontal	$\theta_{GMA\_H}$	-	176	-	degree	8
Effective Vertical		$\theta_{GMA\_V}$	-	176	-	uegree	0
Gray Scale				2.2			9



Notes 1. Contrast Ratio(CR) is defined mathematically as:

- 2. Surface luminance is luminance value at 5 points average across the LCD surface 50cm from the surface with all pixels displaying white. For more information see FIG 2.  $L_{WH} = Average[L_{on}1,L_{on}2,L_{on}3,L_{on}4,L_{on}5]$
- 3. The variation in surface luminance ,  $\delta$  WHITE is defined as :

$$\delta_{\textit{WHITE}} = \frac{Maximum(L_{on1}, L_{on2}, ..... L_{on13}) - Minimum(L_{on1}, L_{on2}, ..... L_{on13})}{Average(L_{on1}, L_{on2}, ..... L_{on5})} \times 100(\%)$$

Measuring point for surface luminance & measuring point for luminance variation

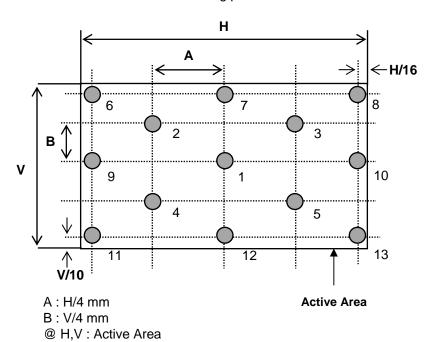



FIG. 2 Measure Point for Luminance

Ver. 1.1 MAR 7, 2007 19 /30



4. **The response time** is defined as the following figure and shall be measured by switching the input signal for "black" and "white".

Response time is the time required for the display to transition from black to white (Rise Time, TrR) and from white to black (Decay Time, TrD).

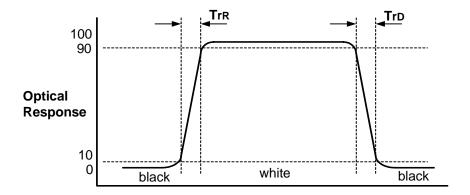

[Figure 7] Response Time

- 5. **The Gray to Gray response time** is defined as the following figure and shall be measured by switching the input signal for "Gray To Gray".
  - Gray step: 5 Step
  - T<sub>GTG AVR</sub> is the total average time at rising time and falling time for "Gray To Gray ".
  - $T_{\text{GTG MAX}}$  is the max time at rising time or falling time for "Gray To Gray ".

Gray to G	Gray to Gray		Rising Time								
Gray to G	ıay	G255	G191	G127	G63	G0					
Falling Time	G255										
	G191										
	G127										
	G63										
	G0										




- 6. Color shift is the angle at which the color difference is lower than 0.04.
  - Color difference(Δu'v')

$$u' = \frac{4x}{-2x + 12y + 3} \qquad v' = \frac{9y}{-2x + 12y + 3}$$

$$\Delta u'v' = \sqrt{(u'_1 - u'_2)^2 + (v'_1 - v'_2)^2} \qquad u'1, v'1 : u'v' \text{ value at viewing angle direction}$$

$$u'2, v'2 : u'v' \text{ value at front}(\theta = 0)$$

- Pattern size : 25% Box size
- Viewing angle direction of color shift : Horizontal, Vertical

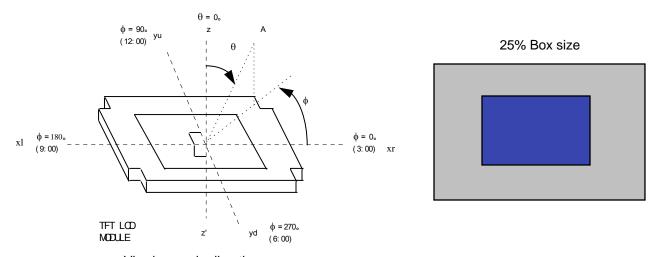

Viewing angle direction


#### Average RGB values in Bruce RGB for Macbeth Chart

	Dark skin	Light skin	Blue sky	Foliage	Blue flower	Bluish green
R	98	206	85	77	129	114
G	56	142	112	102	118	199
В	45	123	161	46	185	178
	Orange	Purplish blue	Moderate red	Purple	Yellow green	Orange yellow
R	219	56	211	76	160	230
G	104	69	67	39	193	162
В	24	174	87	86	58	29
	Blue	Green	Red	Yellow	Magenta	cyan
R	26	72	197	241	207	35
G	32	148	27	212	62	126
В	145	65	37	36	151	172
	White	Neutral 8	Neutral 6.5	Neutral 5	Neutral 3.5	black
R	240	206	155	110	63	22
G	240	206	155	110	63	22
В	240	206	155	110	63	22

Ver. 1.1 MAR 7, 2007 21 /30



- 7. Viewing angle(general) is the angle at which the contrast ratio is greater than 10.
- 8. Effective viewing angle is the angle at which the gamma shift of gray scale is lower than 0.3.

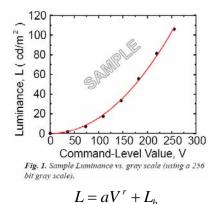

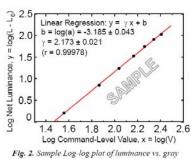


Fig. 2. Sample Log-log plot of luminance vs. gray scale.

$$\log(L - L_b) = r \log(V) + \log(a)$$

Here the Parameter  $\alpha$  and  $\gamma$  relate the signal level V to the luminance L.

The GAMMA we calculate from the log-log representation

9. Gray scale specification

Gamma Value is approximately 2.2. For more information see Table 13.

**Table 13. Gray Scale Specification** 

Gray Level	Relative Luminance [%] (Typ.)
0	0.3
31	1.2
63	4.68
95	11.7
127	21.2
159	35.2
191	53.0
223	75.4
255	100



# 5. Mechanical Characteristics

The contents provide general mechanical characteristics. In addition the figures in the next page are detailed mechanical drawing of the LCD.


**Table 14. Mechanical characteristics** 

	Horizontal	677.30 mm			
Outline Dimension	Vertical	436.80 mm			
	Depth	42.30 mm			
Bezel Area	Horizontal	646.30 mm			
Dezei Alea	Vertical	405.80 mm			
Active Diapley Area	Horizontal	641.28 mm			
Active Display Area	Vertical	400.8 mm			
Weight	5100g (Typ.), 5400g (Max.)				
Surface Treatment	Hard coating(3H) Anti-glare(13%) treatment of the front polarizer				

Notes: Please refer to a mechanic drawing in terms of tolerance at the next page.




#### <FRONT VIEW>

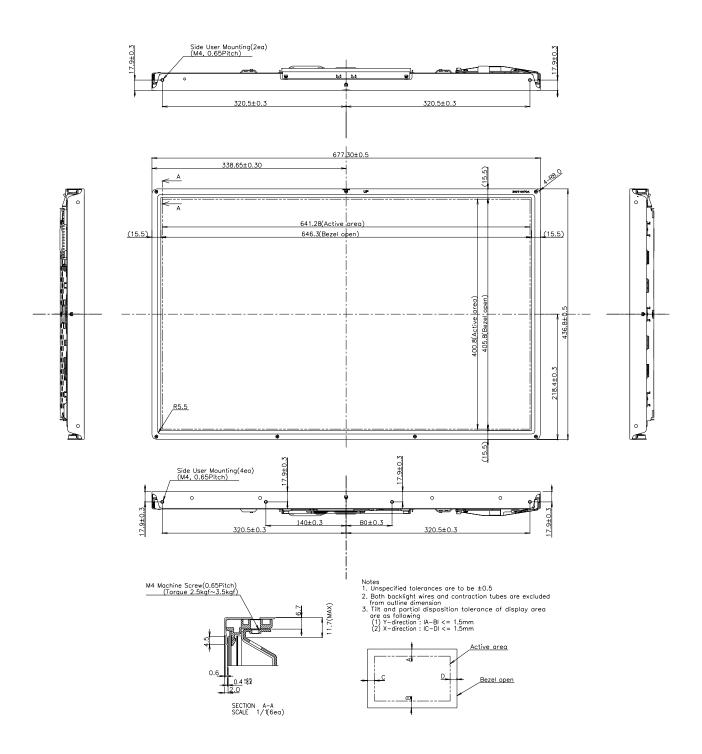



#### <REAR VIEW>

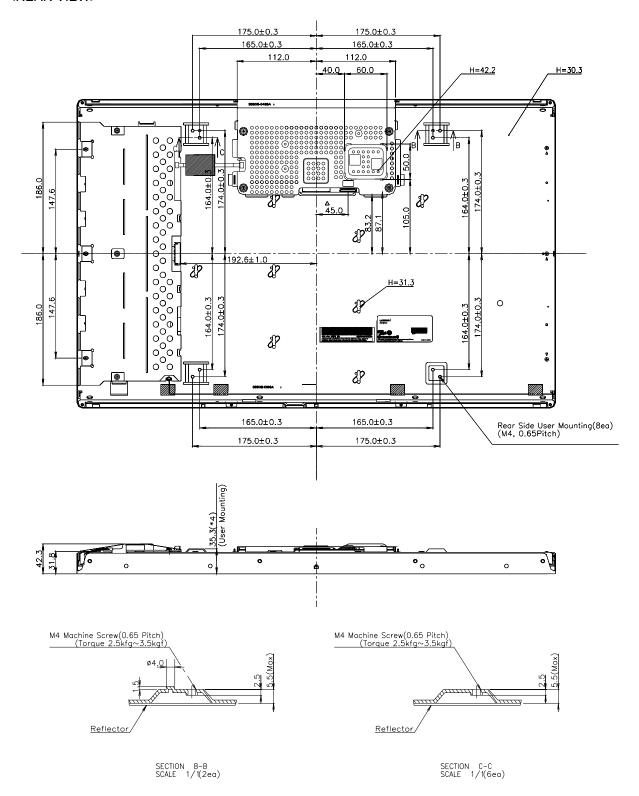



# 6. Reliability

# Environment test condition

No	Test Item	Condition
1	High temperature storage test	Ta= 60°C 240h
2	Low temperature storage test	Ta= -20°C 240h
3	High temperature operation test	Ta= 50°C 50%RH 240h
4	Low temperature operation test	Ta= 0°C 240h
5	Vibration test (non-operating)	Wave form : random Vibration level : 1.0G RMS Bandwidth : 10-500Hz Duration : X,Y,Z, 10 min One time each direction
6	Shock test (non-operating)	Shock level : 100G Waveform : half sine wave, 2ms Direction : ±X, ±Y, ±Z One time each direction
7	Altitude operating storage / shipment	0 - 10,000 feet(3048m) 0 - 40,000 feet(12,192m)



#### 7. International Standards

# 7-1. Safety

- a) UL 60950-1:2003, First Edition, Underwriters Laboratories, Inc., Standard for Safety of Information Technology Equipment.
- b) CAN/CSA C22.2, No. 60950-1-03 1st Ed. April 1, 2003, Canadian Standards Association, Standard for Safety of Information Technology Equipment.
- c) EN 60950-1:2001, First Edition, European Committee for Electrotechnical Standardization(CENELEC) European Standard for Safety of Information Technology Equipment.

#### 7-2. EMC

- a) ANSI C63.4 "Methods of Measurement of Radio-Noise Emissions from Low-Voltage Electrical and Electrical Equipment in the Range of 9kHZ to 40GHz. "American National Standards Institute(ANSI), 1992
- b) C.I.S.P.R "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." International Special Committee on Radio Interference.
- c) EN 55022 "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." European Committee for Electrotechnical Standardization.(CENELEC), 1998 (Including A1: 2000)



# 8. Packing

# 8-1. Designation of Lot Mark

a) Lot Mark

А	В	С	D	Е	F	G	Н	I	J	К	L	М
	1 1		ı		: I				1 1			

A,B,C : SIZE(INCH) D : YEAR

E: MONTH  $F \sim M$ : SERIAL NO.

#### Note

#### 1. YEAR

Year	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010
Mark	1	2	3	4	5	6	7	8	9	0

#### 2. MONTH

Month	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
Mark	1	2	3	4	5	6	7	8	9	Α	В	С

#### b) Location of Lot Mark

Serial No. is printed on the label. The label is attached to the backside of the LCD module. This is subject to change without prior notice.

# 8-2. Packing Form

a) Package quantity in one box: 5 pcs

b) Box size: 781mm X 505mm X 602mm.



#### 9. Precautions

Please pay attention to the following when you use this TFT LCD module.

#### 9-1. Mounting Precautions

- (1) You must mount a module using holes (refer 26~27 page)
- (2) You should consider the mounting structure so that uneven force(ex. twisted stress) is not applied to the module.
  - And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.
- (3) Please attach a transparent protective plate to the surface in order to protect the polarizer.

  Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not describe because the former generates corrosive gas of attacking the polarizer at high temperature and the latter causes circuit break by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizers with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth. (Some cosmetics are determined to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front / rear polarizers. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

# 9-2. Operating Precautions

- (1) The spike noise causes the mis-operation of circuits. It should be lower than following voltage : V=±200mV(Over and under shoot voltage)
- (2) Response time depends on the temperature.(In lower temperature, it becomes longer.)
- (3) Brightness depends on the temperature. (In lower temperature, it becomes lower.)

  And in lower temperature, response time(required time that brightness is stable after turned on) becomes longer.
- (4) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (5) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (6) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimized the interference.
- (7) Please do not give any mechanical and/or acoustical impact to LCM. Otherwise, LCM can not be operated its full characteristics perfectly.
- (8) A screw which is fastened up the steels should be a machine screw (if not, it causes metal foreign material and deal LCM a fatal blow)
- (9) Please do not set LCD on its edge.



# 9-3. Electrostatic Discharge Control

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wrist band etc. And don't touch interface pin directly.

#### 9-4. Precautions for Strong Light Exposure

Strong light exposure causes degradation of polarizer and color filter.

#### 9-5. Storage

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object.

  It is recommended that they be stored in the container in which they were shipped.

# 9-6. Handling Precautions for Protection Film

- (1) The protection film is attached to the bezel with a small masking tape. When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of glue still on the Bezel after the protection film is peeled off.
- (3) You can remove the glue easily. When the glue remains on the Bezel or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.